

# INSTALLATION INSTRUCTIONS

**For use with QED control panels ONLY!**

## GENERAL INFORMATION

The 5819WHS/5819BRS Shock Processor Transmitters feature a built-in shock sensor and are intended for use only with a wireless alarm system that supports Ademco QED 5800 Series wireless receivers.

The built-in shock sensor is used to detect forcible attack upon the surface to which it is mounted. It is designed to protect window and door surroundings. The sensor is electrically normally closed, but, under shock conditions, goes open circuit momentarily.

The 5819 supports three unique zones, known as "loops":

- Loop 1 = built-in shock sensor loop factory wired to TB1 (normally closed)
- Loop 2 = built-in magnetic reed switch in conjunction with a magnet (normally closed)
- Loop 3 = externally wired, closed circuit contact loop connected to TB2

For U.L. installations, a contact may not be more than 3 feet from the transmitter.

The 5819 also has a built-in cover tamper switch which activates when the cover is removed and sends a "check" message to the control.

## Area of Shock Protection

Typical area of coverage is 10 -12 feet (5-6 foot radius). This can vary depending on the type of window or other mounting surface to which the unit is mounted.

## MOUNTING


The description that follows assumes that the unit will be mounted as shown in the diagram, with the magnet (if used) located to the left of the unit. The unit can be installed in any direction, as long as the relationship of the unit to the magnet is maintained. In addition, the arrow embossed on the built-in shock sensor must face UP when the unit is mounted.

To change the shock sensor's orientation, gently push the sensor away from its mounting hole until it can rotate freely. Twist the sensor until the arrow is pointing UP when the detector is in the desired mounting position, then gently push the sensor until it is fully seated in its mounting hole.

Before mounting the transmitter permanently, conduct Go/No Go tests (see QED control's instructions) to verify adequate signal strength and reorient or relocate the transmitter if necessary.

1. Remove transmitter's cover by inserting the flat blade of a small screwdriver into the pry-off slot nearest to the cover's decorative ribs, and twisting the blade.
2. If using a wired contact loop, cut the thin "breakout" area provided at the lower edge in the case wall to allow wire entry.
3. Mount the case back to a solid surface using the two holes provided in the unit (holes 'A' in Diagram 1).
4. If using the unit's reed switch, mount a 5899 Magnet (obtained separately) adjacent to the alignment marks on the case (see Diagram 1).
5. If using an external contact, remove the battery (if installed) and connect a normally closed contact to TB2.

**NOTE:** If the contact loops are not used, make no connection across the terminals.

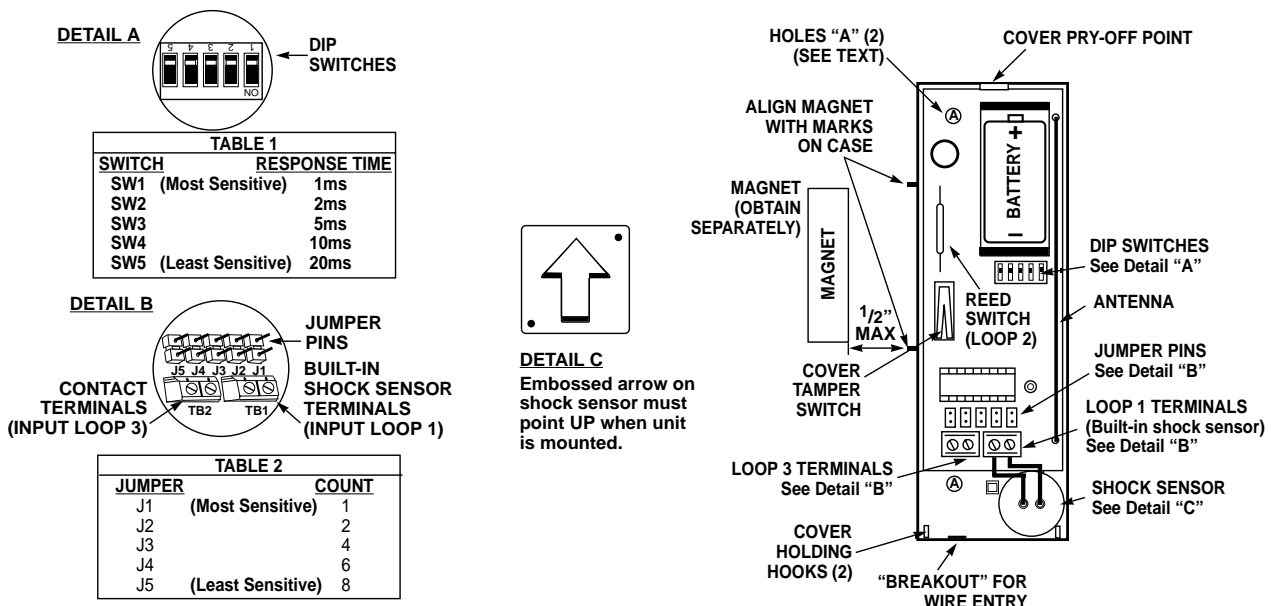

## SETTING RESPONSE TIME and SENSITIVITY

1. Set response time using the DIP switches (use the tip of a pen/pencil). SW1 sets a response time of 1ms (milliSec.), SW5 sets a response time of 20ms. For a response time of 0.5ms, set all DIP switches to OFF (see Table 1).
2. Set the pulse count jumper (see Table 2). The pulse count is reset 3 seconds after the first pulse detected. There is an LED on the PCB which flashes rapidly on transmission.

**NOTE:** Make the device highly sensitive for the purpose of enrolling the shock sensor loop (TB1) into the system (turn SW. 1 on and put jumper on J1). After the device has been enrolled, adjust settings as described in steps 1 and 2 above.

## "ENROLLING" THE TRANSMITTER SERIAL NUMBER

Each 5819 Shock Processor has a unique, factory set serial number (assigned during manufacture) that must be "enrolled" by the QED control before usage in the system. In addition, each zone (loop) of the transmitter must also be programmed at the control panel during installation. When programming, note the following:

- The battery must be installed before "enrolling".
  - Assign each loop to an individual zone number and assign Input Type = 3 (Supervised RF).
    - Loop 1 = built-in shock sensor
    - Loop 2 = built-in magnetic reed switch
    - Loop 3 = externally wired, closed circuit contact
  - Transmit from the unit when prompted by activating any of its loops or tamper switch as follows:
    - Loop 1: Flip the unit upside down, then right side up to activate the sensor.
    - Loop 2: Bring the magnet close to the reed switch, then pull the magnet away to open and close the reed.
    - Loop 3: Open and close the contact according to its instructions.
- You can also manually enter the unit's serial number.
- Test the unit after "enrolling" into the system using the QED control's test procedure.

## BATTERY INSTALLATION/REPLACEMENT

1. Remove the transmitter's cover as described in Mounting Step 1.
2. Observe correct polarity and insert the battery provided into the battery holder (see Diagram).
3. Replace the cover, engage the hooks along one edge and snap shut.

**Do not bend the antenna.**

**NOTE:** Replace with **3V Lithium battery** only:  
Panasonic CR123A, Duracell DL123A, Sanyo CR123A, Varta CR123A, or ADEMCO 466

**BATTERY CAUTION:** Risk of fire, explosion and burns. Do not recharge, disassemble, heat above 212° F (100° C) or incinerate. Dispose of used batteries promptly. Keep away from children.

## UNIT DIMENSIONS

4.8" H x 1.5" W x 1" D

### TO THE INSTALLER

Regular maintenance and inspection (at least annually by the installer and frequent testing by the user) are vital to continuous satisfactory operation of any alarm system. The installer should assume the responsibility of developing and offering a regular maintenance program to the user, as well as acquainting the user with the proper operation and limitations of the alarm system and its component parts. Recommendations must be included for a specific program of frequent testing (at least weekly) to insure the system's operation at all times.

REFER TO THE INSTALLATION INSTRUCTIONS FOR THE QED RECEIVER/CONTROL WITH WHICH THIS DEVICE IS USED FOR WARRANTY INFORMATION, AND FOR DETAILS REGARDING THE LIMITATIONS OF THE ENTIRE ALARM SYSTEM.

**ADEMCO  
GROUP**

165 Eileen Way, Syosset, New York 11791  
Copyright © 1997 Pittway Corporation



N7491-1V1 5/98